



## **Specification and Manual**

Customer: STD  
Description: AC220V 50/60Hz Heater 300W (Din Mounting)  
Customer Part No.: \_\_\_\_\_ Rev.: \_\_\_\_\_  
Delta Model No.: HEH030BB Rev.: 01  
Sample Date Code: \_\_\_\_\_  
Sample Issue Date: MAY.29 2020

Please send one copy of this specification back after  
you signed approval for production pre-arrangement

Approved by: \_\_\_\_\_

Date: \_\_\_\_\_

DELTA ELECTRONICS, INC.

TAOYUAN PLANT

252, SHANGYING ROAD, GUISHAN INDUSTRIAL ZONE,  
TAOYUAN CITY 33341, TAIWAN

TEL: 886-(0)3-3591968

FAX: 886-(0)3-3591991

Part no.:

Delta model no.: HEH030BB

## Table of content

Description.....	3
Packing & Shipping.....	3
Safety Notes.....	3
1. Product Instruction .....	7
1-1. General Description .....	7
1-2. Main Feature & Model Number.....	7
1-3. Dimension.....	8
1-4. Thermal and Airflow .....	9
2 Electrical Specification.....	9
2-1. Indicator & Connector.....	9
2-2 Protection.....	10
3. Environmental Condition .....	10
4. Reliability Table.....	11
5. Safety Certification .....	11
6. Fault analysis and processing.....	11
7. Reclaim .....	12
8. Versions .....	13

Part no.:

Delta model no.: HEH030BB

## Description

This document is an installation and the characteristics of Delta HEH series. Before installing the unit, please read this manual thoroughly, and following the instructions contained in it. The document is the exclusive property of Delta Electronics, Inc. it should not be distributed, reproduced, or any other format without prior permission of Delta. Specifications are subject to change without notice.

## Packing & Shipping

During handling or transport, it should be handled and transported with care. Please Pay attention to the below icons on the package. After power on please make sure there is no abnormal acoustic noise.



## Safety Notes

Before installing heater, read these instructions carefully. Failure to follow these instructions could damage the product or cause a hazardous condition.  
2. Check the ratings on the heater label to assure the product is suitable for your application.

Meaning of WARNING and CAUTION notices:



### **Warning:**

To avoid electric shock and equipment damage, disconnect any power supplies to the enclosure before installing the electric heater. Do not power on any circuits before all internal and external electrical and mechanical clearances are checked to assure that all assembled equipment functions safely and properly.

1. Installation work and electrical wiring should be done only by qualified personnel in accordance with all applicable codes, standards and national wiring regulations.

Part no.:

Delta model no.: HEH030BB

2. Use this unit only in the manner intended by the manufacturer. If there is any question please contact the manufacturer.
3. Install the heater in accordance with the instructions in this installation manual. Improper installation may result in damage, electric shock or fire.
4. Make sure that all wiring is secured, that specified wires are used, and there is no strain on the terminal connections or wires.
5. Before serving or cleaning unit, switch power off and disconnect power supply.
6. When cutting or drilling into wall or ceiling, do not damage electrical wiring or hidden utilities.
7. Be sure to use only the specified accessories and parts to complete installation.
8. Protective grounding connection: The enclosure must be grounded at the protective ground terminal. Use recommended wire and use spring washer to avoid loosening.
9. To reduce the risk of electrical shock: Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
10. This appliance is intended for use only by qualified personnel.



**Caution:**

Do not use these electric heaters in dusty, dirty, corrosive, or hazardous locations. Adequate protection must be taken to protect people from potential burns and to protect other components from this heat. Always allow the heater to cool before touching it. Thermal sensitive devices or materials may need to be located further from the heater than the minimum recommended distance. Heaters must not be installed on wood or other combustible surfaces. This heater must only be installed in a totally enclosed enclosure.

1. Do not allow children to touch it. Avoid placing any object on it.
2. Do not block the air inlets or exits.

Part no.:

Delta model no.: HEH030BB

3. Do not install heater at any place where there is a danger or flammable gas leakage.
4. To avoid injury, do not touch exhaust air or surface during operating or just turn off products.
5. This appliance is not to be used by any persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given proper supervision or instruction.
6. Children should be prevented from playing with the appliance.

Part no.:

Delta model no.: HEH030BB

Specification for Approval

Customer :

Description : AC220V 50/60Hz Heater 300W (Din Mounting)

Customer P/N :

Rev. :

Delta model no. : HEH030BB


Rev. : 01

Sample revision. :

Date Code :

Sample issue date : MAY.29 2020

Quantity :1 pc

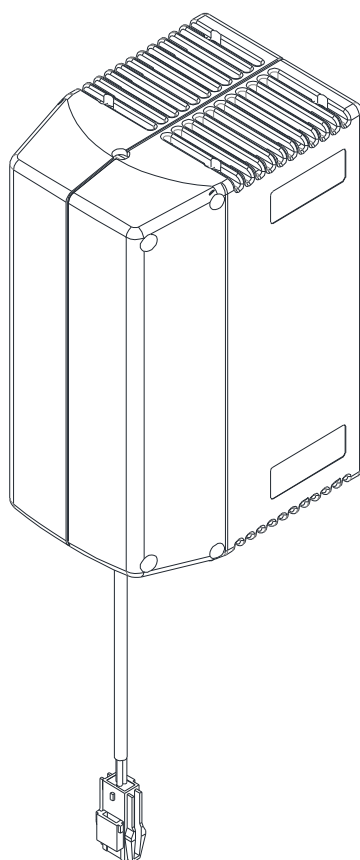

Part no.:

Delta model no.: HEH030BB

## 1. Product Instruction

### 1-1. General Description

The heater is designed for warming up the air in enclosure. It can avoid equipment damaged at lower temperature and water condensation. The heater can be mounted on the wall of cabinet.

HEH X1 X A - XXX

(1) (2) (3) (4) (5)

No	Item	Digit	Specification
(1)	Product Message	HEH	Heater
(2)	Cooling Capacity (W)	X1	X1=030 (300W)
(3)	Operation Voltage	B	AC input
(4)	Product Version	B	N/A
(5)	Customer ID	N/A	N/A

### 1-2. Main Feature & Model Number

Dimensions, Weight & Mounting method		
Dimension (H x W x D) (without flange)	mm (inch)	145 x 75 x 105 (5.7 x 3.0 x 4.1)
Application		Indoor
Weight	Kg (lbs)	0.6 (1.3)
Mounting Method		Din rail
Color (optional)		BLK
Environmental Protection & Performance		
Operating Temperature Range	°C (°F)	-40 to +60 (-40 to +140)
Operating Humidity		Internal: 0~90% RH, non-condensing
Storage Temperature	°C (°F)	-40 to +75 (-40 to +167)
Storage Relative Humidity	RH	Internal: 0~90% RH, non-condensing
Protection for Dust ,Wind and Water (External)	IEC 60529	IP20
Cooling Capacity & Operational Data		
Rated Heating Capacity*	W	300 +/-10%
Rated Heating Current*	A	1.65(Max.) (at 220Vac)
Rated Internal Airflow	CFM	43 REF.
Power & Range		
Input Voltage	VAC	220
Input Voltage Range	VAC	200~240
Startup average current **	A	9.0(Max.)
Inrush Current ***	A	50(Peak)

Part no.:

Delta model no.: HEH030BB

Key Components		
Controller		NA
Communication port		NA
Fans		Delta High Efficiency Fan

\* The Heating capacity ( $W$ ) is defined as  $W=V \cdot A$  at  $0^{\circ}\text{C}$

$W$  : power consumption

$V$ : Operating Voltage


$A$  : Operating current

\*\* Test condition are AC input 220Vac that is cold start at ambient temperature  $25^{\circ}\text{C}$ . Please check the notice at section 2 – Electrical specification

\*\*\* Test condition are AC input 220Vac that is cold start at ambient temperature  $20^{\circ}\text{C}$ . Please check the notice at section 2 – Electrical specification.

### 1-3. Dimension

NOTE :  
(1) Material : PBT 94V0  
(2) Dimensional tolerance :  $\pm 1.5\text{mm}$

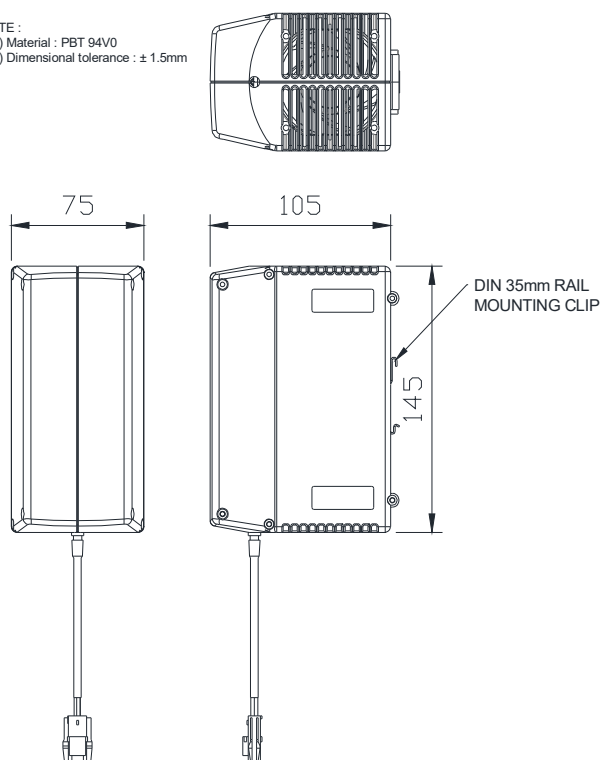

Unit: mm(inch)

Material: Plastic


Dimensional Tolerance:  $\pm 1\text{mm}$

Part no.:

Delta model no.: HEH030BB

## 1-4. Thermal and Airflow

The cool air flow into the heater and warmed up by heating sink inside the case, then heated air is supplied to the system.

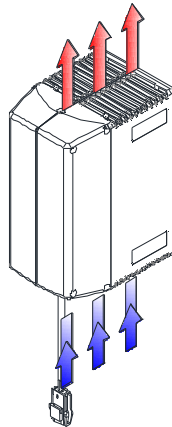


*\* Minimum gap for both of cool air inlet and warm air exhaust is required to avoid short circulation*

## 2 Electrical Specification

### 2-1. Indicator & Connector

#### ➤ Power Supply Connector Connection

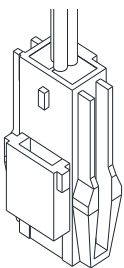

Power input : JST YLR-02V

Pin1: L input

Pin2: N input

#### WARNING :

1. Do not disconnect and lockup the wire connector while the power is on.
2. Ensure the power connector polarity matched accurately to avoid device damage.



Part no.:

Delta model no.: HEH030BB

➤ **Startup average current and inrush current :**

The startup average and inrush current waveform defined as bellow table. These experiments are all finished at ambient 25°C at 220Vac.

Tested waveform to startup average current and inrush current.

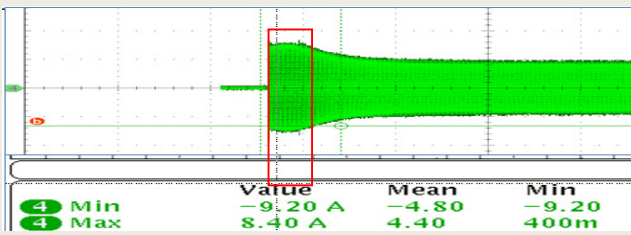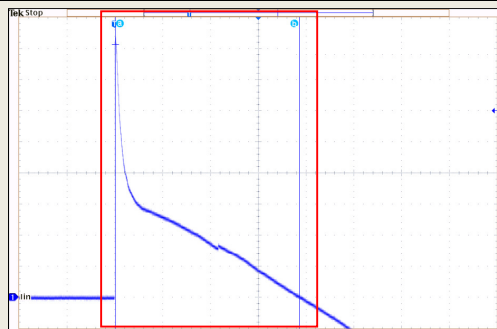Item	Current peak and time	Wave form												
Startup average current	Maximum Current : 9A Max. Duration Time:3sec Measuring methods: The PTC element maximum transient current RMS value after power on.	 <table><tr><th></th><th>Value</th><th>Mean</th><th>Min</th></tr><tr><td>Min</td><td>-9.20 A</td><td>-4.80</td><td>-9.20</td></tr><tr><td>Max</td><td>8.40 A</td><td>4.40</td><td>400m</td></tr></table>		Value	Mean	Min	Min	-9.20 A	-4.80	-9.20	Max	8.40 A	4.40	400m
	Value	Mean	Min											
Min	-9.20 A	-4.80	-9.20											
Max	8.40 A	4.40	400m											
Inrush current	Peak current: 50A Max. Duration Time: 4msec Measuring methods: Power on AC input then measure the PEAK current value.													

## 2-2 Protection

➤ **Over Temperature Protection:**

Thermal cut-off switcher: 85°C (heating stop)

## 3. Environmental Condition

➤ **Operating Temperature**

-40 to +60 (-40 to +140)

➤ **Storage Temperature**

-40 °C ~ +75 °C (-40 °F ~ 167 °F)

➤ **Operation Humidity**

Internal air loop: 0 ~ 90 % RH, non-condensing

➤ **Ingress Protection Rating**

IP20 (IEC60529)

Part no.:

Delta model no.: HEH030BB

## 4. Reliability Table

Test item	Condition
High temperature	IEC 60068-2-2
Low temperature	IEC 60068-2-1
High temp. /High humidity	IEC 60068-2-14 TEST Nb
Temperature cycle	IEC 60068-2-3
Vibration	ETSI 300 019-1-4 CLASS 4.1
Package bump	IEC 60068-2-29

### ➤ MTBF

The L10 Fan life is expected to be at least 80,000 hours continuous operation at 40°C with 15 ~ 65%RH .@ label rated voltage.

## 5. Safety Certification



## 6. Fault analysis and processing

Fault State	Analysis of the Reasons	Solutions
Power on, and the Heater is no heating	<ul style="list-style-type: none"><li>• Power failure or no power.</li><li>• The target temperature is higher than Thermostat on temp</li><li>• Heater failure.</li></ul>	<ul style="list-style-type: none"><li>• Check the power supply and the electric circuit.</li><li>• Check the ambient temperature to define heater Is failure or not</li><li>• Please contact Delta or authorized Delta service agent.</li></ul>
Power on, Heater is always at heating status.	<ul style="list-style-type: none"><li>• The target temperature is lower than Thermostat off temp</li><li>• Heater failure</li></ul>	<ul style="list-style-type: none"><li>• Check the ambient temperature to define heater Is failure or not,</li></ul>

Part no.:

Delta model no.: HEH030BB

		<ul style="list-style-type: none"><li>• Please contact Delta or authorized Delta service agent.</li></ul>
Power on, the Fan is stop but the heating is enable at low temp condition	<ul style="list-style-type: none"><li>• Fan lock</li><li>• Heater failure</li></ul>	<ul style="list-style-type: none"><li>• Power off product than check the Fan blade is no block by foreign matter</li><li>• Please contact Delta or authorized Delta service agent.</li></ul>
Power on, the Fan is running but the heating is disenable at low temp condition	<ul style="list-style-type: none"><li>• Over temperature protect.</li><li>• Heater failure</li></ul>	<ul style="list-style-type: none"><li>• Check the heater air input and output is no block, If the heater surface is still hot, wait for surface cold down and power on again at low temp condition for check the over protect is clear or not.</li><li>• Please contact Delta or authorized Delta service agent.</li></ul>

## 7. Reclaim



At the end of the unit working life, the produce must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service.

Part no.:

Delta model no.: HEH030BB

## 8. Versions

REV.	DESCRIPTION	DRAWN	CHECKED			APPROVED	ISSUE DATE
			ME	EE	CE		
00	ISSUE SPEC	EDWARD.LEE 09/10'18	EDWARD.LEE 09/10'18	ARVIN.HSU 09/10'18	-----	Diamond CHEN / CW.CHEN 09/10'18	09/05'18
01	REMOVE Warranty	EDWARD.LEE 05/29'20	EDWARD.LEE 05/29'20	ARVIN.HSU 05/29'20	-----	Diamond CHEN / GAVIN.CHEN 05/29'20	05/29'20